


A. & H. Meyer Sdn Bhd (528797-M)


No. 3, Jalan Astaka U8/84
Section U8, Bukit Jelutong
40150 Shah Alam, Selangor
Malaysia

T: +60 3 7845 7277
W: www.ah-meyer.com.my
E: sales@ah-meyer.com.my


Installation Guide

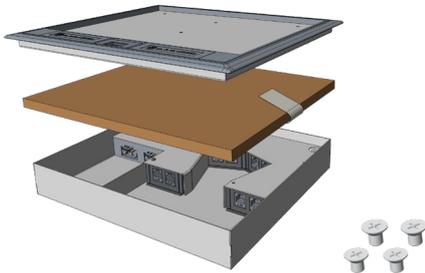


- Part List**
Lid with frame x 1
Casing x 1
Screw x 4
Protective carton cover x 1
(for installation purpose)

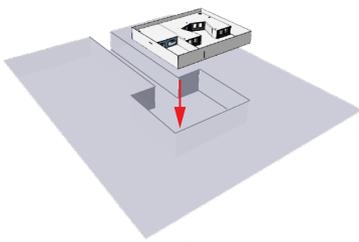


1. Take the lid and put aside for later. Place the casing into the pre cut screed as per the floor plan. Ensure the casing sits as even as possible with the floor level

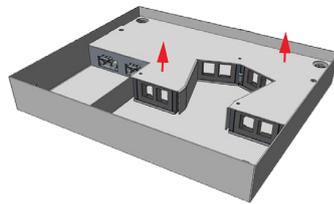


2. Take off the casing cover

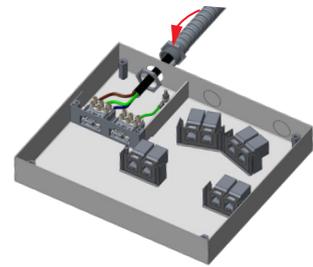


3. Remove the knockouts to install electrical wiring and data cables accordingly. Ensure the earth wire is connected to the terminal

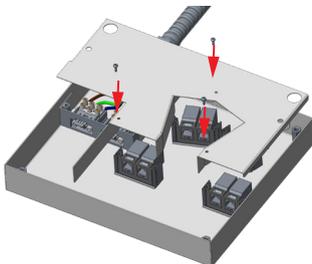


4. Place back the casing cover and tighten the screws to secure it

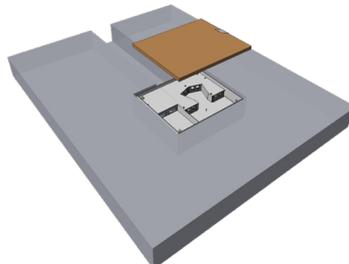


5. Put on the protective hard carton cover. Complete the casting work

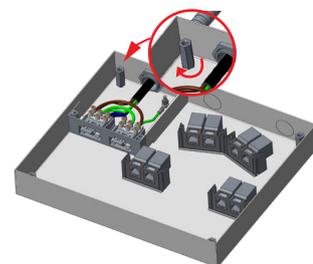

6. Remove the protective hard carton cover. To level the frame with the floor, adjust the four long screws with a spanner

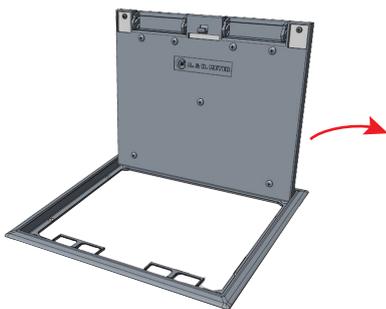

7. Push the lid beyond the opening angle of 109 degrees to detach the lid from the frame

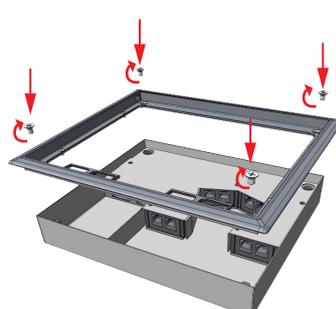


8. Secure the lid frame to its position by fastening the screws on all four sides




9. Place the lid's dome hinge on one of the frame and push other side of lid till the hinge slots into its position



Dimensions

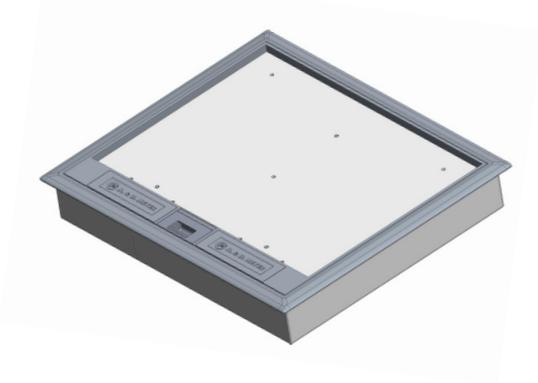

Flooring Material Cutting Size

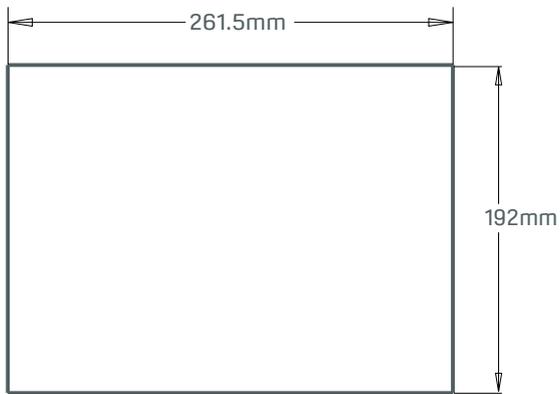

Flooring material thickness



Screeding Dimension

