



## Installation Guide

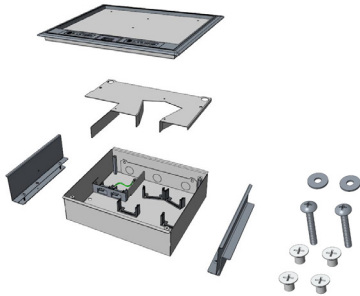


### Part List


Lid with frame x 1  
 Casing x 1  
 Bracket x 2  
 Screw M4x30 x 2  
 Washer M4 x 2  
 Screw M6x8 x 4

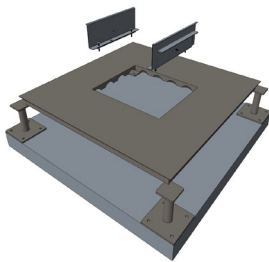


1. Install both bracket and tighten the screw from the top at each side. Ensure the bracket sits firmly to the raised floor.

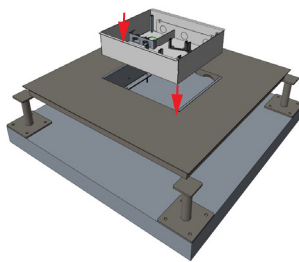


2. Place the casing into the pre cut as per the floor plan. Ensure the casing sits on the bracket.

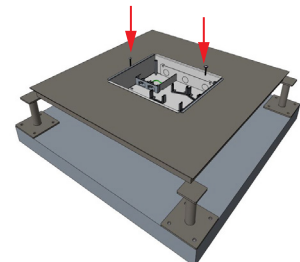


3. Fit in the two screws M4x30 with the two washer M4 at each side to tighten the casing to the bracket.

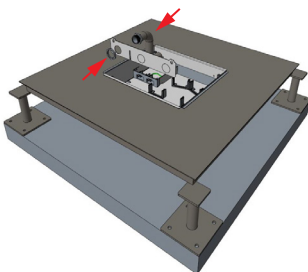


4. Remove the gland cover to install electrical wiring and data cables accordingly. Place back the gland cover once installation is done.

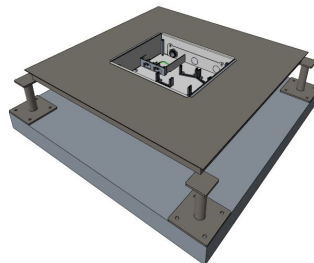


5. Complete the internal wiring to the GST18 connectors.

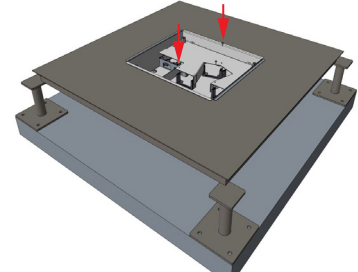


6. Place the casing cover and tighten the screws to secure it.

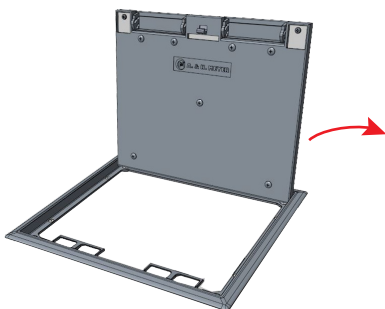

7. Push the lid beyond the opening angle of 109 degrees to detach the lid from the frame.

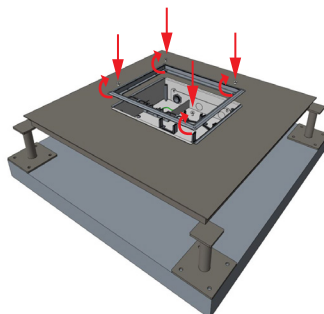


8. Secure the lid frame to its position by fastening the four screws M6x8 on all four corners.

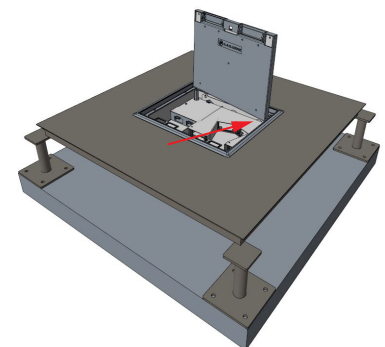


9. Place the lid's dome hinge in one of the frame's grooves and push the other side of the lid until the hinge slots into its position.

## Raised Floor Dimensions

### Floor Box RP

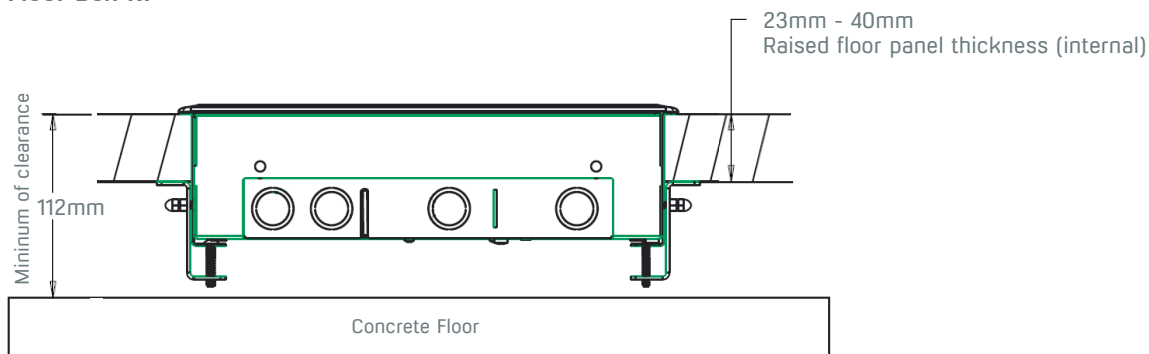


### Floor Box RPD

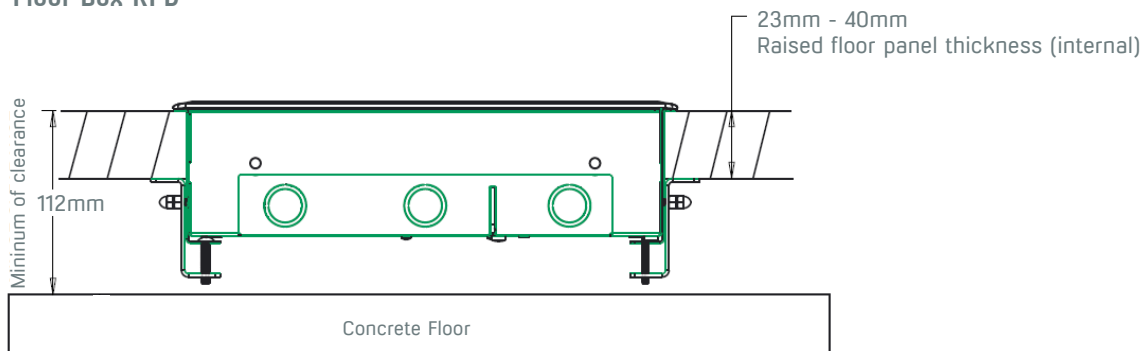


## Cut Out Dimensions

### Raised Floor Cut Out

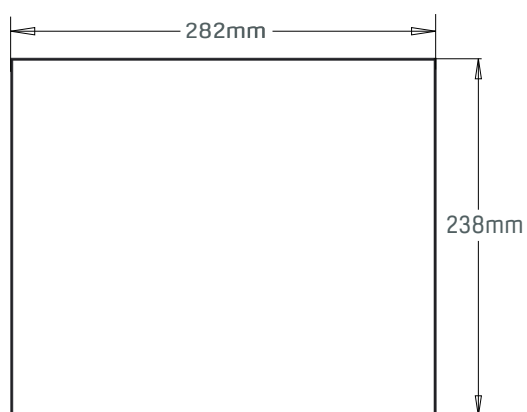

### Lid Insert

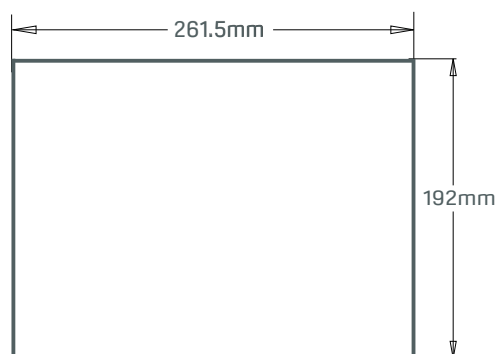

Flooring material thickness

