



NETBOX

Profilebox Sub

Installation Guide




A. & H. MEYER

A brand of **Legrand**

A. & H. Meyer Sdn Bhd (528797-M)


No. 3, Jalan Astaka U8/84
Section U8, Bukit Jelutong
40150 Shah Alam, Selangor
Malaysia

T: +60 3 7845 7277
W: www.ah-meyer.com.my
E: sales@ah-meyer.com.my

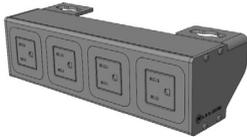


Part List


- NETBOX Profilebox Sub x 1
- Profilebox Sub Mushroom x 2
- Flat Head Screw #8 x 3/4inch x 2

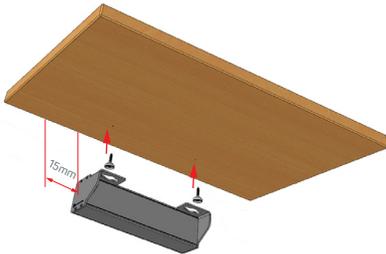

1. Define the Profilebox Sub's location and ensure that there is a minimum clearance of 15mm each side between the Profilebox Sub and the table edge or neighbouring obstacles. Then, mark the screw holes' center position. (refer backpage's measurement table, "B"). Mount the mushroom using the screw.

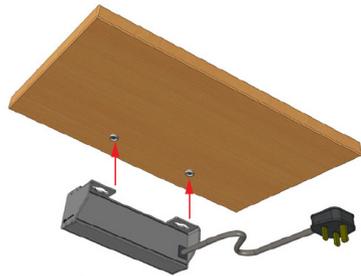

2. Place the Profilebox Sub on the mushroom.

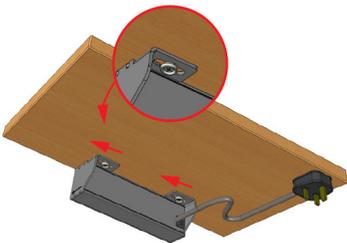

3. Push the Profilebox Sub towards left or right to lock into position. Ensure the mushroom is fully inserted into the bracket. Use a mallet to knock in position if necessary.



4. Secure cable and insert into power source. Product is ready to use.

For dimensions
Please refer to the back.



NETBOX

Profilebox Sub



A. & H. MEYER



A brand of **legrand**

A. & H. Meyer Sdn Bhd (528797-M)

No. 3, Jalan Astaka U8/84
Section U8, Bukit Jelutong
40150 Shah Alam, Selangor
Malaysia

T: +60 3 7845 7277
W: www.ah-meyer.com.my
E: sales@ah-meyer.com.my

Dimensions

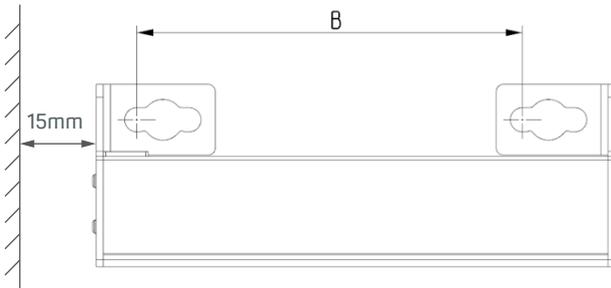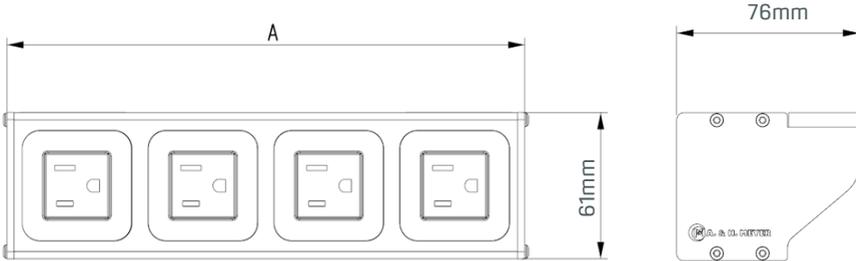


M	2	3	4	5
A	112	165	218	271
B	56	109	162	215

M = Number of Module Outlets

A = Total Profile Length

B = Distance of Mushroom Hole to Hole Location

**All measurements are in mm*

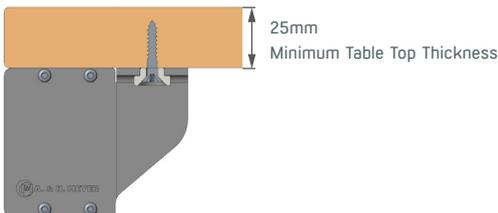

For Installation Guide
Please refer to the back.